

## Safety & Care


1. Always take care when using power tools, particularly if there is any water in the working area.
2. For different wall types you will need to ensure that you are using the correct type of fixing for the material of the wall. Wall fixings are not supplied with this product.
3. This product must only be fitted to solid brick, concrete block walls or similarly strong materials offering appropriate support for the maximum safe working load.
4. When drilling into a tiled surface do not use a hammer drill.
5. Always use a drill bit that is suitable for the surface that is being drilled.
6. To retain the best quality finish, clean product regularly with a soft damp cloth.
7. Do not use abrasive or chemical cleaners, as these will damage the product.
8. **The maximum safe working load for the 300mm/450mm grab bars is 100kg. The max load for the 600mm grab bar is 80kg.**

## Product Location

Hand rails are only as strong as the wall to which they are fixed and the fixings that are used. For different wall types you will need to ensure that you are using the correct type of fixing for the material of the wall.

The addition of backboards on the outside of the wall or appropriate strengthening of internal structures may be required to provide adequate wall strength.

**NOTE: If the wall is made of lightweight thermal blocks, aerated hollow brickwork or prefabricated partitions even the most appropriate fixings may not be able to withstand the loads which can be suddenly applied to hand rails.**

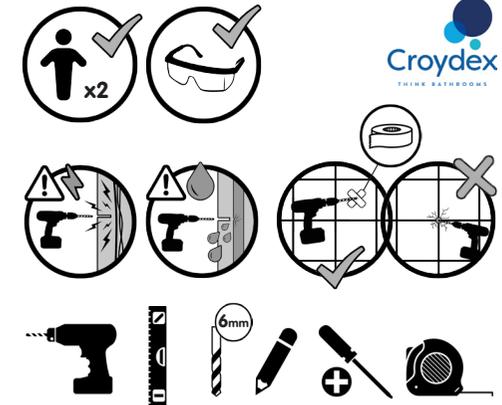

**Croydex**  
THINK BATHROOMS

## FITTING INSTRUCTIONS

1. Separate the wall bracket covers from the wall brackets by twisting the covers in an anti-clockwise direction.
2. Place the grab bar in position on the wall ensuring it is level and using the hole centres of each wall bracket as a template, mark the screw fixing positions on the wall surface.
3. Drill the holes in the marked positions using a masonry drill. If the product is to be fitted onto a ceramic tiled wall, a ceramic drill bit should be used.
4. Insert wall plugs (if applicable) flush to the surface of the wall. If fitting to a tiled surface, the wall plugs should be inserted below the surface of the tile to avoid cracking.
5. Insert the screws through the holes of the wall brackets and screw to the wall. (See Fig.2)
6. Slide the bracket covers back onto the wall brackets and twist in a clockwise direction to lock the covers in position. (See Fig.1)

For details of the other items in the Croydex range please visit our website: [www.croydex.com](http://www.croydex.com)  
Croydex, Central Way, Andover,  
Hampshire, SP10 5AW, UK  
Tel: +44 (0) 1264 365881

Fax: +44 (0) 1264 356437  
Email: [info@croydex.co.uk](mailto:info@croydex.co.uk)

## FIGURE 1

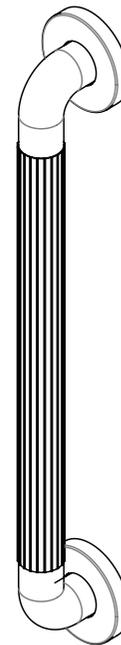


Fig.1


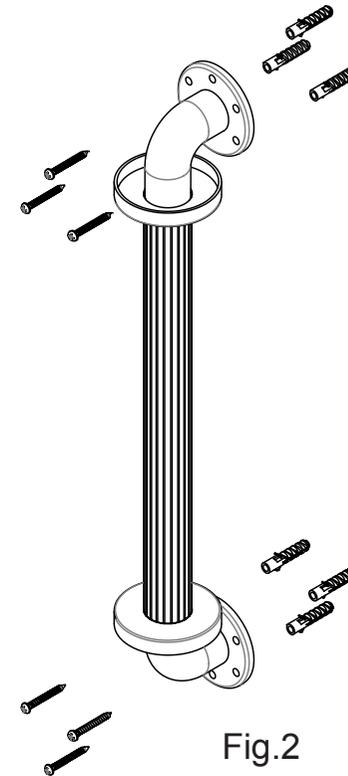


Fig.2

Use pan head screws with a large diameter head only. Do not use counter sunk screws.

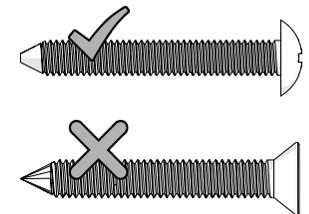

Do not overtighten the screws.

**The wall fixings are shown for illustrative purposes only. Wall fixings are not supplied with the product.**