

# QA200021 BLACK METAL FRAMED MIRROR WITH MATT BLACK CHAIN



## CONTACT DETAILS

Croydex  
Central Way  
Andover  
Hampshire  
SP10 5AW  
UK

Tel: +44 (0)1264 365881  
Email: [info@croydex.co.uk](mailto:info@croydex.co.uk)

[www.croydex.com](http://www.croydex.com)

**ALL PRODUCT DIMENSIONS DETAILED IN THIS INSTALLATION  
AND MAINTENANCE MANUAL ARE APPROXIMATE**

**ALL ILLUSTRATIONS OF THE PRODUCT ARE FOR REFERENCE  
ONLY. COMPONENTS SUPPLIED WITH INDIVIDUAL PRODUCTS  
MAY DIFFER**

## SECTION 1 - INTRODUCTION


Please follow all assembly and product care instructions to ensure that your product is assembled safely and retains it's high quality finish.

Before attempting to fit or use this product ensure that it can be properly installed in the desired location.

### PLEASE RETAIN THIS MANUAL FOR FUTURE REFERENCE

#### SAFETY & PRODUCT CARE


- 1. ALWAYS** take care when using power tools, particularly if there is any water in the working area.
- 2. ALWAYS** wear eye protection when using power tools.
- 3. ALWAYS** check for pipes and cables before drilling into walls.
- 4. NEVER** use a hammer drill when drilling into tiled surfaces.
- 5. ALWAYS** use a drill bit that is suitable for the surface that is being drilled.
- 6. DO NOT** use abrasive or chemical cleaners as these may damage the product.
- 7. DO NOT** strike the mirror with hard or sharp objects.

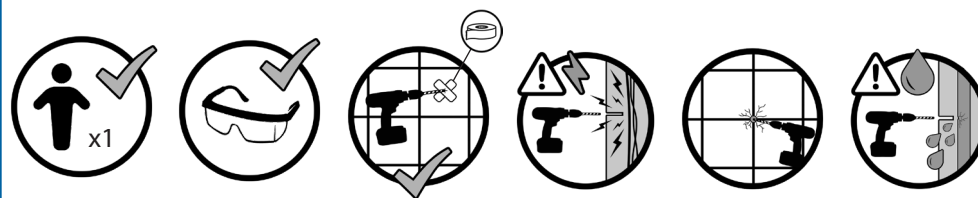

#### TOOLS REQUIRED




#### WALL FIXING PACK

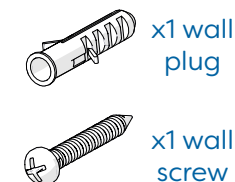


## SECTION 2 - INSTALLATION

### INSTALLATION WITH CHAIN



1. While holding the mirror up to the wall via the chain - mark the point at which the mirror should hang from.  
(See Fig. 1)

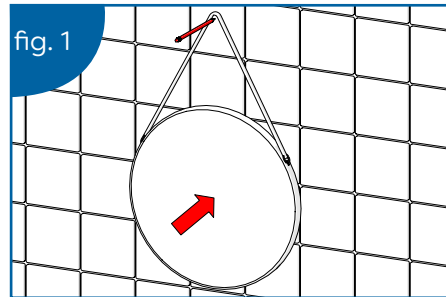

2. Drill a 6mm hole in the marked point.  
(See Fig. 2)

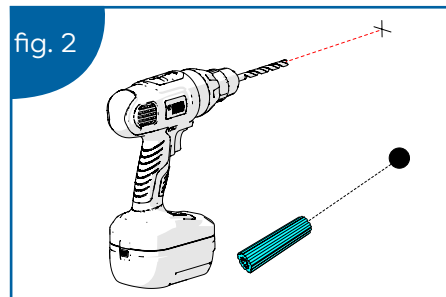


3. **BEFORE HANGING THE MIRROR ENSURE THE WALL FIXING IS SECURE!**  
Hang the mirror from the wall fixing. Ensure the chain is of an equal length on both sides to ensure that the mirror is level.  
**ENSURE THE MIRROR IS SECURELY HELD BEFORE LETTING GO!**  
(See Fig. 3A & 3B)

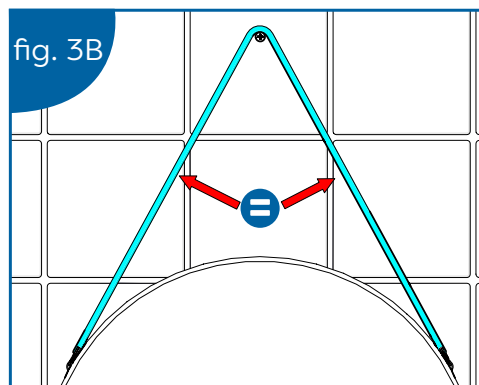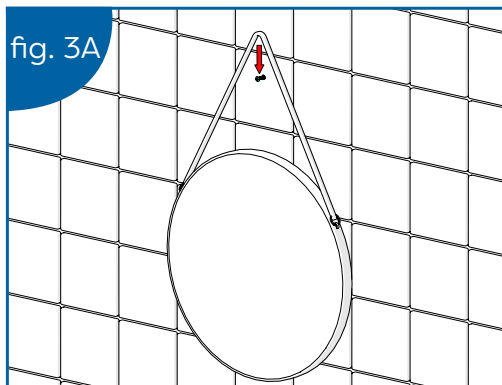


### INSTALLATION WITHOUT CHAIN

1. Detach the split ring and chain from the mirror. Then hold the mirror up to the wall in the desired position. Mark the location of the top edge on the wall.  
(See Fig. 4)

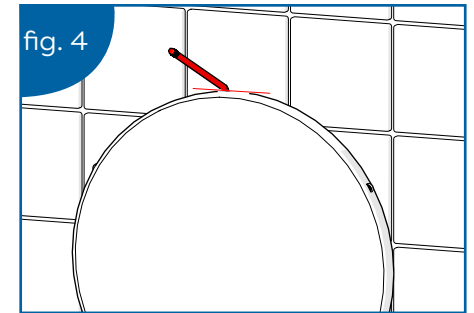

2. Measure 90mm vertically down from the marked line and mark this location.  
Then drill a 6mm hole and insert the wall plug.  
(See Fig. 5)

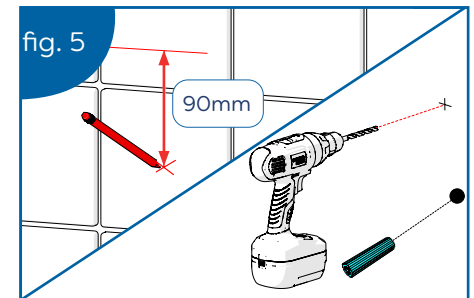

3. **BEFORE HANGING THE MIRROR ENSURE THE WALL FIXING IS SECURE!**  
Hang the mirror from the wall fixing using the keyhole slot on the back.  
**ENSURE THE MIRROR IS SECURELY HELD BEFORE LETTING GO!**  
(See Fig. 6)

