



WL600222H
WL600322H

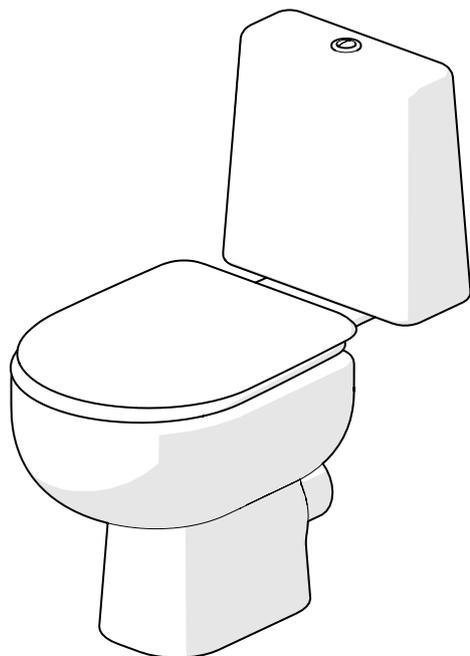

Please read the information sheet before proceeding.

WHAT TO KNOW BEFORE INSTALLING...

1. When positioning the seat onto the pan ensure that the lid and ring can be lifted and remain upright on the pan. In some cases the seat can be obstructed by the cistern or the flush handle which prevents it from staying upright.
2. Before activating the grip pad technology (Step 7) ensure the toilet seat is in a perfect position as it cannot be reused without compromising performance.
3. To remove the seat at the end of its use, use a scraper to carefully lever the hinge away from the toilet pan.

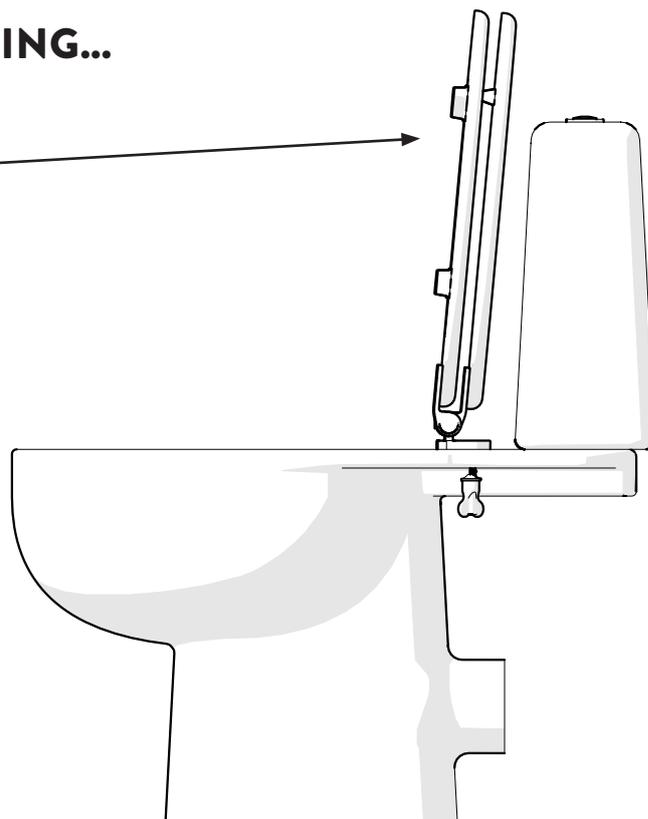

1.



Croydex, Central Way, Andover,
Hampshire, SP10 5AW, UK



+44 (0) 1264 365881



+44 (0) 1264 356437



info@croydex.co.uk



www.croydex.com

TS 050 R01



For reference only



Parts may vary.
(Optional)








Warning! Please
take special care.

PLEASE READ ALL OF THE INFORMATION CAREFULLY AND REFER BACK WHEN YOU SEE THE NUMBERED ICONS THROUGHOUT INSTRUCTIONS.

SAFETY AND CARE (EN)

- 1 To retain the best quality finish, clean product with a soft cloth and a mild soap solution.
- 2 Do not use abrasive or chemical cleaners as they may damage the surface of the toilet seat or hinges.
- 3 Spray cleaning liquids onto the cloth and not directly onto the product.
- 4 Take care when cleaning the toilet pan with chemical cleaners. Avoid contact of the chemical cleaners with the toilet seat or hinges. Immediately rinse off any splashes to avoid damage or discolouration to the surface of the toilet seat and hinge parts.

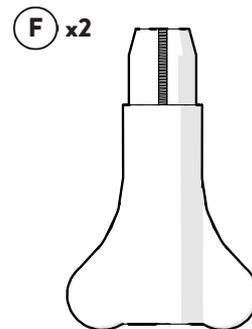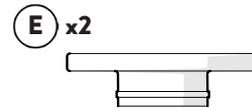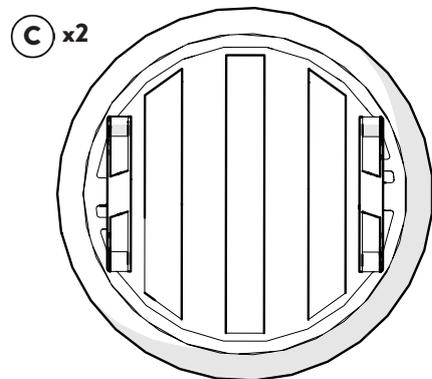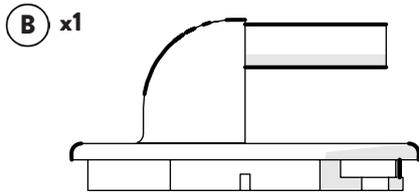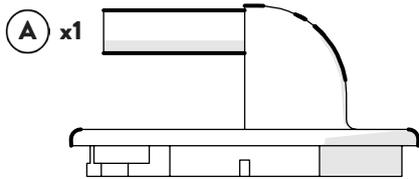

1. BEFORE YOU BEGIN

PREPARATION

- Remove the old seat from the pan and clean the surface around the fixing holes.
- Ensure the surfaces around the fixing holes are completely dry before beginning the installation.


PLACEMENT

In its sealed packaging place the seat over your pan to ensure you are happy with size and shape of the toilet seat.


A BIT OF ADVICE

To ensure you do not lose any components down the toilet you may want to place cling film over the bowl of the toilet.


2. Place the hinge into the seat and then slide the bolt into the middle lot on each hinge.

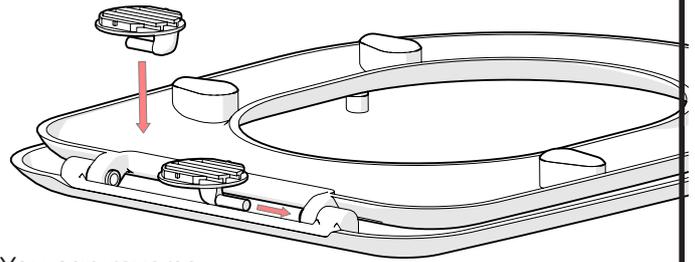


You can reverse the hinges to offer further adjustment. See Step 4.

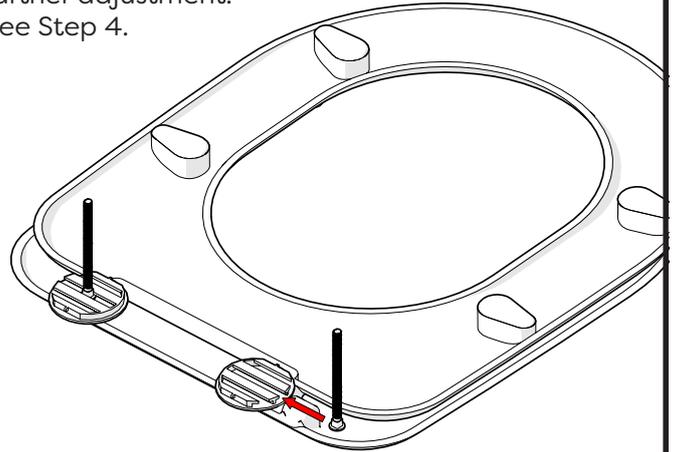


3. Place the seat onto the pan with the bolts going through the fixing holes.

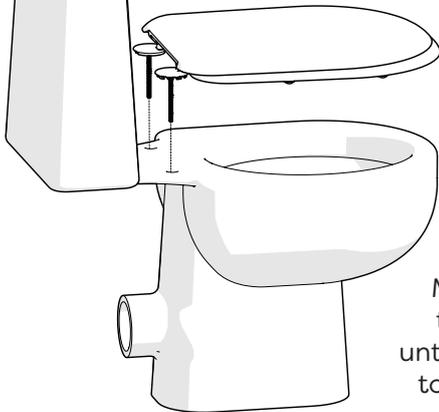


Move the bolt into the different slots until the seat adjusts to the length of the toilet pan.

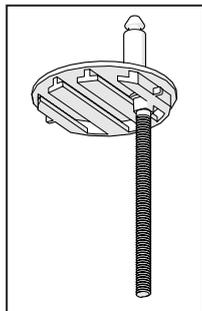

Min Adjustment

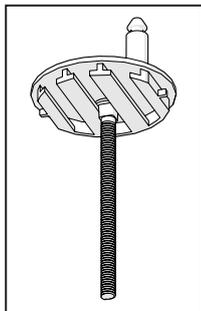


Middle Adjustment

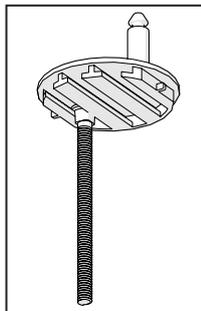


Max Adjustment

4. You may have to swap the hinges around to offer further adjustment

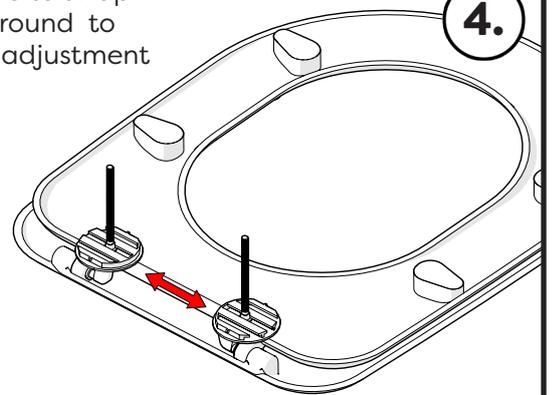

Adjust to fit the length of pan.

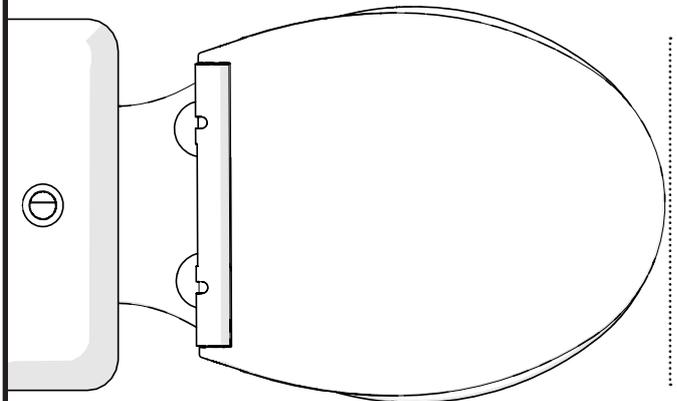

3.

 Croydex, Central Way, Andover, Hampshire, SP10 5AW, UK

 +44 (0) 1264 365881


 +44 (0) 1264 356437

 info@croydex.co.uk


 www.croydex.com

TS 050 R01

5. Peel the protective cover from the Grip Pad and place the Grip Pad component onto each hinge, rotate to lock in place.

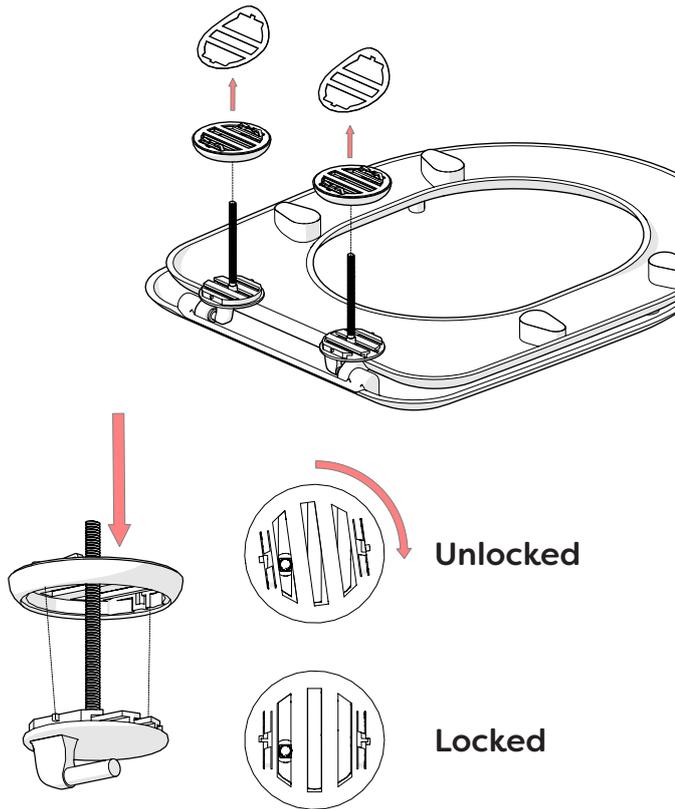


6. Place the seat onto the pan and **lightly screw** the bolt into place using the plastic washer and nut supplied.

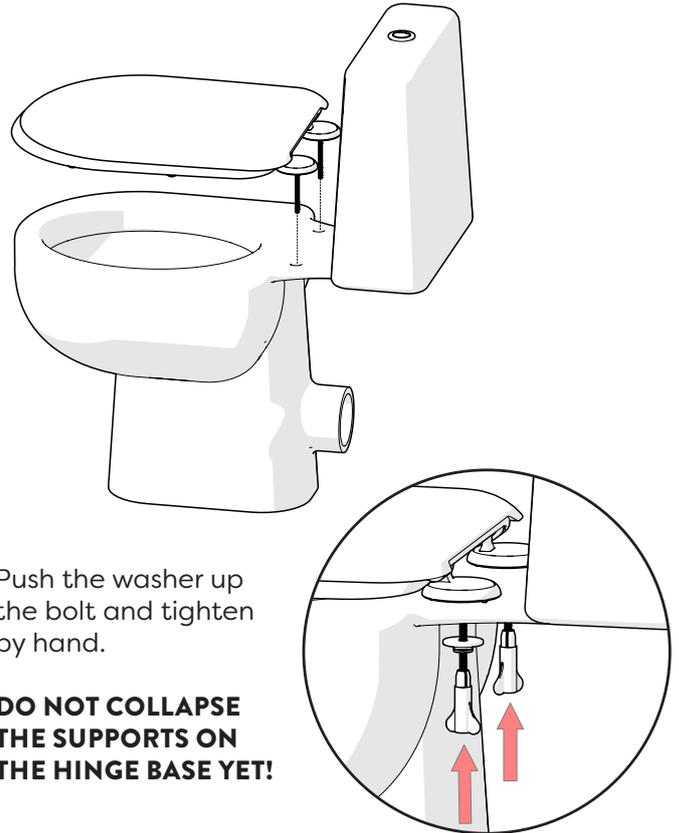


7. Complete a final check to ensure that you are happy with the position of the seat.

Then apply pressure to the hinges to collapse the supports allowing the grip pad to bond to the toilet pan. **Hold for at least 20 seconds.**

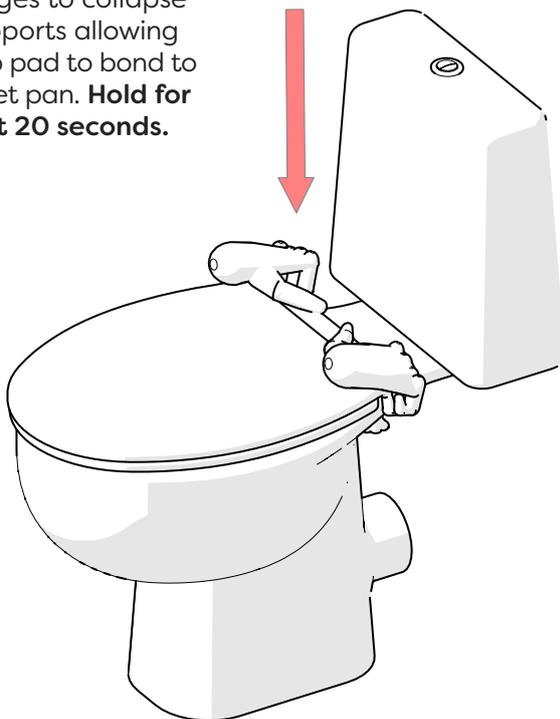

8. **Fully tighten** the bolt using the plastic nut.

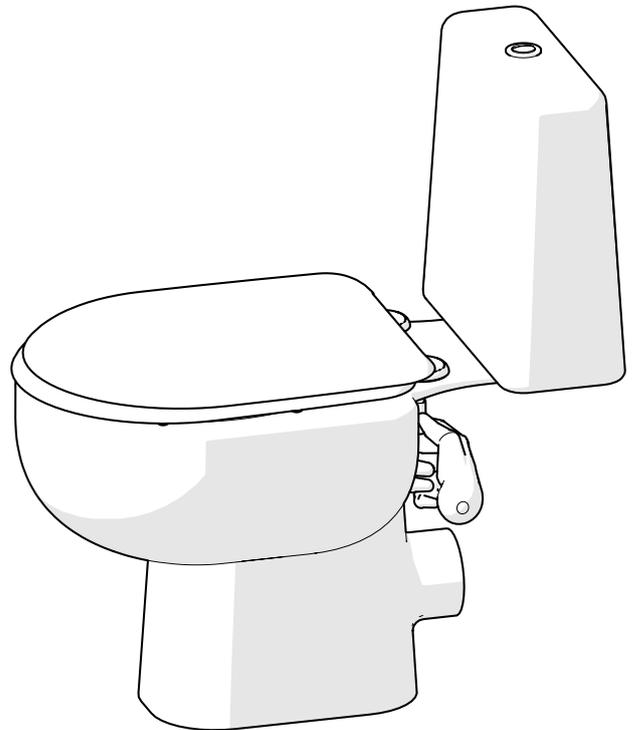

4.

 Croydex, Central Way, Andover, Hampshire, SP10 5AW, UK

 +44 (0) 1264 365881

 +44 (0) 1264 356437

 info@croydex.co.uk

 www.croydex.com

TS 050 R01